

IMPORTANT NOTICE



Please read this user manual carefully. It contains important information on the Smart Door Lock and maintenance.

Make sure that the mechanical key is kept in a safe place outdoors, i.e. inside your car, office etc.

Do not expose the lock to rain, sunlight and outdoor environments.

Do not try to repair/disassemble the lock to avoid unnecessary loss.

Do not hit the lock with any hard objects.

Make sure that the door is properly locked when you are going out.

Do not use water or any chemical substances such as oil or benzene to clean the lock. This will result in short circuit, ageing and/or paint stripping.

Make sure to change your PIN Code regularly.

Do not use rechargeable batteries for the lock. This product is only compatible with alkaline batteries.

The virtual PIN Code is up to 32 digits. E.g. Actual PIN Code + **** or **** + Actual PIN Code (Do not key in garbled character before or after the virtual PIN Code).

If the touch screen is out of order, try to restart the device with the emergency power supply below, which is connected to the Micro-USB.

When using the key to open the lock, please turn the key back to its original position before removing it.


Please follow the above instructions to avoid any injuries and/or damages on the lock.

Do not put any flammable material such as gas, paint, gasoline, etc., near the smart lock to avoid explosion and fire, including explosive materials such as alcohol, gasoline, etc.


We are not responsible for any damage or property loss resulting from improper installation, readjustment, use and/or repair by user or third parties.

PRODUCT INTRODUCTION

OUTER BODY PARTS

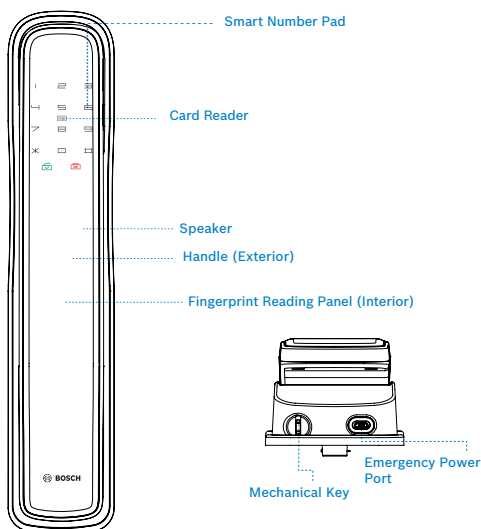

INNER BODY PARTS AND LOCK CASE

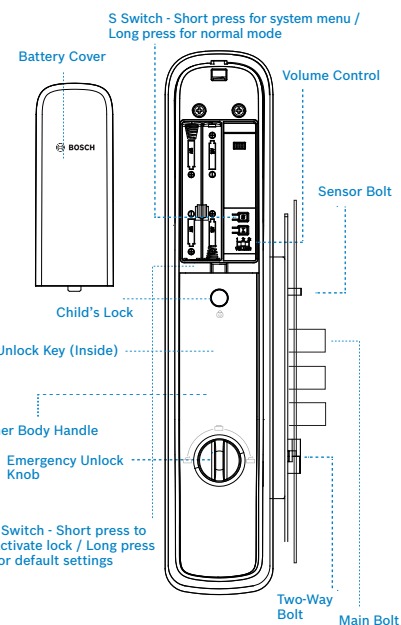

SPECIFICATIONS

Outer Lock Size: 20(D)x80(W)x400(H)mm

Include Handle: 65(D)x80(W)x400(H)mm

Operating Temperature: -25° C ~+55° C

Operating Humidity: 25-93% RH, non-coolant

Unlock PIN Code Memory: 100 sets

Unlock Fingerprint Memory: 100 sets


Unlock Card Memory: 100 sets

Supports Mechanical Key unlocking

Supports long-distance unlocking (optional) with purchase of online component

Battery: 1.5VAA (LR6) alkaline batteries X4 (Operating Voltage: 4.5V-6V)


NAME OF PARTS

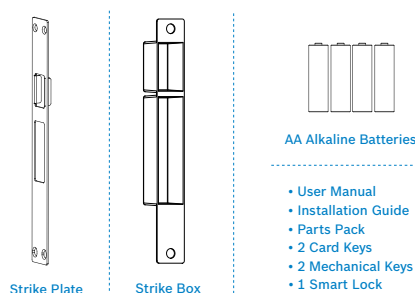

HOW TO USE


S Switch

Short press for system menu / Long press for normal mode

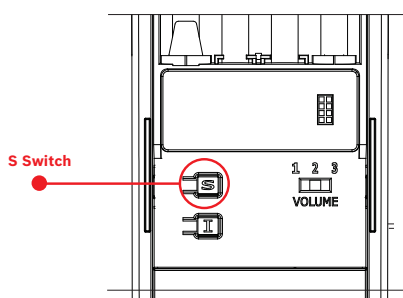


I Switch

Short press to enforce lock / Long press for default setting

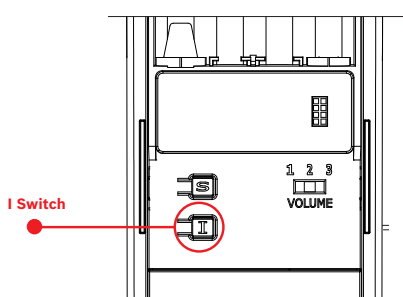

Volume Control

Choose 3 levels of volume

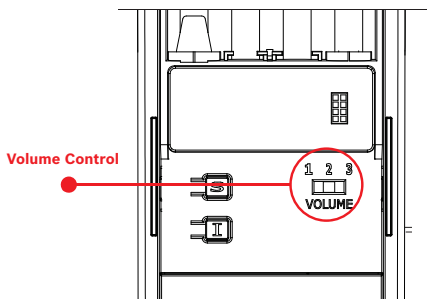

USER MANUAL BOSCH SMART LOCK EL800A

INITIALISATION AND RESTORE PROGRAM



Initialise User PIN Code: **1234567890**


New changed password for 6 digits. "*" key as back. "#" key as confirm.




Master information included master PIN code and master fingerprint.

Restore Default Setting: Long press "I" switch for 5 seconds until you hear the voice guide.

OPERATION	DESCRIPTION
ADD USER	1 2 3 4 5 6 7 8 9 PIN CODE
Add Master PIN Code	Press S switch, enter initial master PIN code when prompted by the voice guide (if it has been changed, enter the changed master PIN code) and press # followed by 1, 1. Enter the new PIN code, and press # to confirm. Re-enter the new PIN code and press # to save.
Add Normal PIN Code	Press S switch, enter master PIN code when prompted by the voice guide, and press # followed by 1, 2. Enter user code: 002-090, and press #. Enter the normal user PIN code, and press # to confirm. Re-enter the PIN code and press # to save.
Add One-Time PIN Code	Press S switch, enter master PIN code when prompted by the voice guide, and press # followed by 1, 3. Enter user code: 091-0100, and press #. Enter the One-Time PIN code, and press # to confirm. Re-enter the One-Time PIN code and press # to save.
Delete Single PIN Code	Press S switch, enter master PIN code when prompted by the voice guide, and press # followed by 1, 4. Enter user code: 002-100 and press #. Successfully deleted. Master PIN code cannot be deleted before the default setting is restored.
Delete All PIN Code	Press S switch, enter master PIN code when prompted by the voice guide, and press # followed by 1, 5, and press #. Successfully deleted. Master PIN code cannot be deleted before the default setting is restored.
ADD USER	CARD KEY CARD
Add Normal Key Card	Press S switch, enter master PIN code when prompted by the voice guide, and press # followed by 2, 1. Enter user code: 101-190 and press #. Successfully added.
Add One-Time Key Card	Press S switch, enter master PIN code when prompted by the voice guide, and press # followed by 2, 2. Enter user code: 191-200 and press #. Successfully added.
Delete Single Key Card	Press S switch, enter master PIN code when prompted by the voice guide, and press # followed by 2, 3. Enter user code: 101-200 and press # to confirm. Press # again. Successfully deleted.
Delete All Key Card	Press S switch, enter master PIN code when prompted by the voice guide, and press # followed by 2, 4 to confirm. Press # again. Successfully deleted.
ADD USER	FINGERPRINT
Add Master Fingerprint	Press S switch, enter master PIN code when prompted by the voice guide, and press # followed by 3, 1. Enter your fingerprint 3 times. Successfully added. Re-enter if fail.
Add Normal Fingerprint	Press S switch, enter master PIN code when prompted by the voice guide, and press # followed by 3, 2. Enter user code: 202-290 and press # to confirm. Enter your fingerprint 3 times. Successfully added. Re-enter if fail.
Add SOS Fingerprint	Press S switch, enter master PIN code when prompted by the voice guide, and press # followed by 3, 3. Enter user code: 291-300 and press # to confirm. Enter your fingerprint 3 times. Successfully added. Re-enter if fail.
Delete Single Fingerprint	Press S switch, enter master PIN code when prompted by the voice guide, and press # followed by 3, 4. Enter user code: 202-300 and press # to confirm. Press # again. Successfully deleted. Master fingerprint cannot be deleted before the default setting is restored.

OPERATION	DESCRIPTION
ADD USER  FINGERPRINT	
Delete All Fingerprint	Press S switch, enter master PIN code when prompted by the voice guide, and press # followed by 3, 5. Press #. Successfully deleted. Master fingerprint cannot be deleted before the default setting is restored.
ADD  NETWORK	
Activate Network *(optional function)	Press S switch, enter master PIN code when prompted by the voice guide, and press # followed by 4, 1 Network requires the support of network components. Refer to network components user guide for details.
Deactivate Network *(optional function)	Press S switch, enter master PIN code when prompted by the voice guide, and press # followed by 4, 2 Successfully deactivated.


SYSTEM SETTINGS 	
Unlock Mode	Press S switch, enter master PIN code when prompted by the voice guide, and press #. Activate safe mode: Enter 5, 1, 1 Deactivate safe mode: Enter 5, 1, 2.
Change Language	Press S switch, enter master PIN code when prompted by the voice guide, and press # Chinese: Enter 5, 2, 1 English: Enter 5, 1, 2

 INSTANT FUNCTION SETTINGS 	
Activate One Touch Security	Press 2, 2, #
Deactivate One Touch Security	Press 4, 4, # followed by master PIN code and press #
Long Distance Call *(optional function)	Press 6, 6, #
Activate Force Lock	Short press "I" key
Deactivate Force Lock	Enter master information. Open the door for once.
Active Child's Lock	Press  for 3-5 seconds to active the child's lock
Deactivated Child's Lock	1. Deactive by pressing the unlock button from inside 2. Press  for 3-5 seconds again to deactivate the child's lock.

* (optional function) Network version requires the purchase of network components separately.


OPENING THE DOOR

OPEN WITH PIN CODE

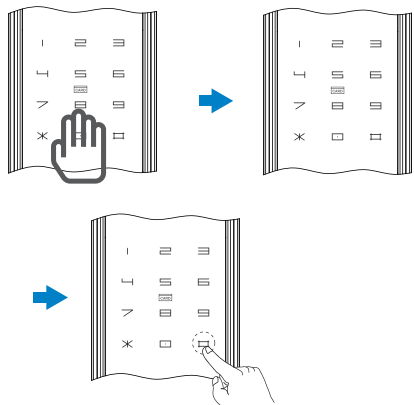

Touch the number pad >>> Enter your registered PIN code >>> Press # to open door


OPEN WITH FINGERPRINT

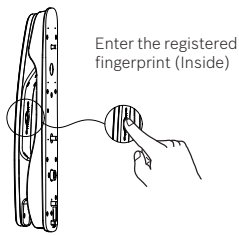



OPEN WITH CARD KEY



OPEN WITH MECHANICAL KEY

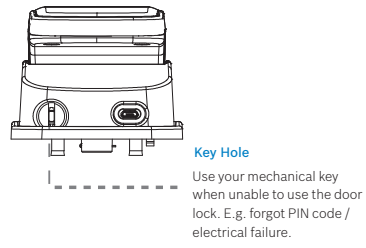

OPEN WITH EMERGENCY POWER SUPPLY

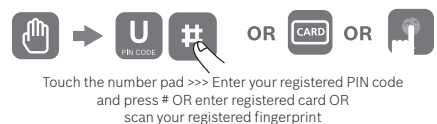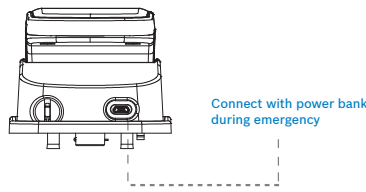

TO REPLACE BATTERY

This product uses four 1.5V alkaline AA batteries. It is sustainable for 1 year if used 10 times a day. (Users are advised to use genuine alkaline batteries.)



Make sure to replace all 4 batteries in the following manner:

- * Upon hearing the low battery reminder;
- * Using or replacing wrong type of batteries, which may cause an explosion;
- * Dispose of old batteries responsibly;

ALARM AND USUAL FUNCTION

BREAK IN / DAMAGED ALARM

- Board anti-pry alarm: Alarm will go off when the front board is being pried.
- Handle anti-pry alarm: System will lock down when the handle is being pried.
- One touch security alarm: In single mode, alarm will go off when someone is breaking the lock. In network mode, alarm will go off when someone is breaking the lock and will be reported to the terminal (network version requires the purchase of network components separately).
- Key open sensor alarm: Alarm will go off when the mechanical key is being used.
- Main bolt alarm: Alarm will go off when the main bolt is not locked.
- SOS alarm (only for network version): Both single mode and network mode alarm will not go off, but will be reported to the terminal (network version requires the purchase of network components separately).

3-MINUTE SYSTEM LOCK

- System will lock down for 3 minutes after 3 failed attempts. The number pad will indicate the countdown time.

FORCE LOCK

- Short press I key and the voice guide will say "Force lock activated". Then you can use your master PIN code or master fingerprint or mechanical key to unlock the door to which you will hear "Force lock deactivated".

IC CARD FEATURE REMINDER

- Other IC cards using the NFC feature may not function on other devices once it is registered on Bosch Smart Lock.

PRODUCT STANDARD

This smart lock series is certified with the following national standards: GA701-2007 General specifications for burglary-resistant fingerprint locks GB21556-2008 General safety-technique requirements of locks

WARRANTY AND SERVICES

FRIENDLY REMINDER

In the event that your smart lock has malfunctioned, kindly contact your reseller or customer service and provide the following information:

Address and contact number. Description of malfunction, purchase date and received date, product model and product code. The information above will help us serve you better and save you unnecessary costs.

TERMS OF WARRANTY

The warranty service applies to manufacturing defects and regular-use coverage only. It does not cover the following:

- Any damage caused by the user(s);
- Incorrect installation, testing and/or use other than instructed by user manual;
- Unauthorized repair and/or modification to the product;
- Any accidental, misuse and/or intentional damages that causes malfunction;
- Damage caused by acts of nature;
- Any loss and/or damage caused by the product's environment such as electricity, temperature, moisture, magnetic field and/or any other unavoidable reasons.
- Any other reason except for product quality.